



FAQ's D-545

How can I turn the flash off?

Press the **Flash Mode** button  (to the right of the **OK/Menu** button) and scroll through the icon options using the arrows. Select Flash Off  and press the **OK** button.



How do I focus an image?

Press down half way on the **Shutter Button** and hold. The bracketed area in the center of the monitor is your focus plane and will lock into focus. (A small green circle will appear in the upper left-hand corner of the monitor to indicate that the focus is locked.)

Why are my photos still blurry even after I lock focus?

There is a noticeable delay from when the Shutter Button is pressed, to when the photo is taken. Take this into consideration by keeping the camera as still as possible. Any movement occurring while the picture is being taken will result in a blurred image. Learn the sensitivity of the Shutter Button. Pressing it down half way will focus an image, and pressing it all the way down will take a picture.

What should I do if the camera turns itself off?

After 30 seconds of not being used, the camera will go into sleep mode to save battery power. Press the **SHUTTER, Shooting Button** , or **Playback Button**  to turn the camera monitor back on.

After 30 minutes in sleep mode, the camera will retract its lens and completely turn off. Press the power button to resume use if this occurs.

What are some ways to save battery power while using the camera?

1. Turn the flash off if you don't need it.
2. Limit the amount of times you focus on a subject. Re-locking the camera into a specific focus and flash field is unnecessary and uses a lot of power.
3. Don't use the monitor for extended periods of playback while shooting.

4. Don't keep the camera connected to a computer or printer unless you are performing a specific task.


How should I take a series of photos if I want to achieve a panoramic effect later?

Press the menu button **OK/Menu** button select the **MODE MENU** tab by pressing the right arrow. You will automatically be on the **CAMERA** tab in the MODE MENU. Use the right arrow to select the **PANORAMA** option. When it is highlighted yellow, scroll to the right to achieve a horizontal grid on the monitor. Scroll up or down to achieve a vertical grid. Use these gridlines as a guide to maintain a horizon line as you take a series of overlapping photos.

How can I manipulate the color of my photos?


Alter the color by changing the white balance settings under the **MENU**.

Top menu ▶ [MODE MENU] ▶ [PICTURE] ▶ [WB]

 "How to use the menus" (P. 16)

- In : Top menu ▶ [WB]

1 Select a white balance setting, and press .

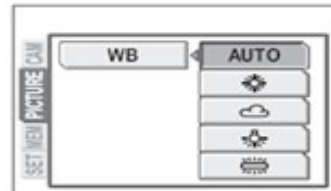

? TIPS

- You can select a white balance setting other than the actual light source, and enjoy the different color tones on the monitor.