

# VIDEO QUICK START D545

→ In Shooting Mode  select  on the Mode Dial

→ Select HQ 320 x 240 30 fps by:

Press **OK/ Menu** button → Use left arrow to select



→ HQ 320 x 240 30 fps → press **OK**


## **1** Decide the composition of the picture.

- The remaining recording time in the internal memory or card is displayed on the monitor.



Remaining recording time

## **2** Press the shutter button fully to start recording.


- The card access lamp blinks while the movie is recorded in the internal memory or card.
- During movie recording,  lights red.



## **3** Press the shutter button again to stop recording.

- When the remaining recording time has been used up, recording stops automatically.
- When there is space in the internal memory or card, the remaining recording time (P. 27) is displayed, and the camera is ready to shoot.

### **Note**

- Audio recording is not available.
- The flash cannot be used.
- Remaining recording time may become exhausted quickly during recording. Try formatting the internal memory or card with your camera before continuing recording.  "Formatting" (P. 67)

### **Notes for recording long movies**

- The camera continues to record the movie until the shutter button is pressed again or the space in the internal memory or card is exhausted.
- A long recorded movie cannot be edited. (P. 60)
- If a single movie recording uses up all of the space in the internal memory or card, create space by erasing the movie or downloading it to a computer.